

Digital Check® Complete RDC Starter Kit

PN: 82276707-000

Regular maintenance is important to keep your scanner running smoothly. For remote deposit capture, the two most important things to remember are cleaning your device at set intervals, and changing the ink cartridge when it starts to run out. It's recommended to keep a set of cleaning materials and a spare ink cartridge on hand so you're ready when the need arises, and this kit will take care of your needs through the first months of ownership.



KIT CONTENTS

- Digital Check 1-Line Inkjet Cartridge (PN: MS0083)
- Small Cleaning Kit (PN: IS0036) including:
 - 5 Cleaning Cards
 - 1 Cleaning Swab
 - 1 Wipe

COMPATIBLE MODELS*

- CheXpress® CX30
- CheXpress CX35
- TellerScan® TS240
- TellerScan TS250
- SmartSource® Elite 55

***note: for models with single-line inkjet only**



5-Card Cleaning Kit

Regular cleaning is important for any scanner, whether it's used at the teller window or for remote deposit capture. While RDC users tend to scan fewer items than banks do, cleaning can still help remove dust and debris that accumulates in the feed mechanism and paper path over time.



Single-Line Ink Cartridge

Certain models use an inkjet to print restrictive endorsements on the rear of checks, preventing reuse. Replace when your endorsements become faint or contain errors like blank lines through the printing. Please make sure your scanner is an inkjet model before ordering.



Swabs & Wipes

Used for detailed cleaning of the image sensor glass by hand. While standard cleaning with a card will suffice in most cases, for difficult or persistent dirt and dust, it may be necessary to clean manually. Even a small amount of dirt on the image sensor can be repeated into a "streak" across the entire image.

